
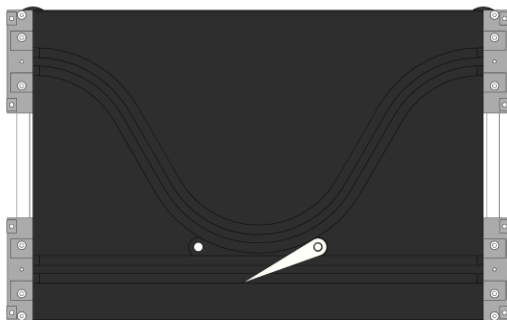


KREUZMODUL FEST

FUNKTION

Das Kreuzmodul dient zum Ausschleusen von Werkstückträgern vom Hauptumlauf auf einen Nebenumlauf. Mithilfe eines Eingebauten Umleitmoduls werden die WT's präzise umgeleitet.

ZEICHNUNG

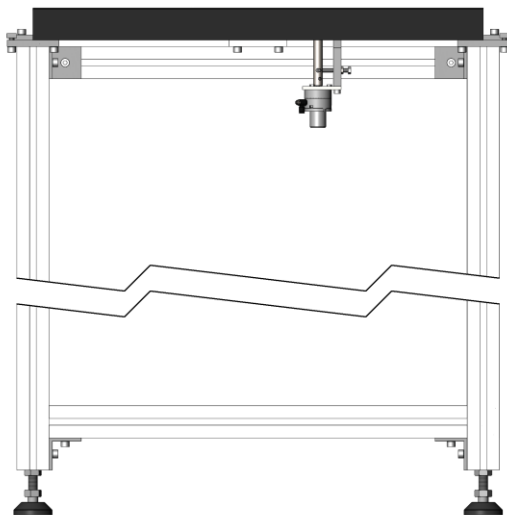

WARTUNG


Nr.	Beschreibung	Intervall ¹	Wartung
1	Kreuzmodul	M	Reinigen
2	Kreuzmodul	M	Kontrolle der Funktionen und für Beschädigungen

H: Stunde S: Schicht W: Woche M: Monat J: Jahr

VERSCHLEISSTEILE / ERSATZTEILE

Nr.	Bezeichnung
1	Grundplatte

PNEUMATISCHE STEUERUNG

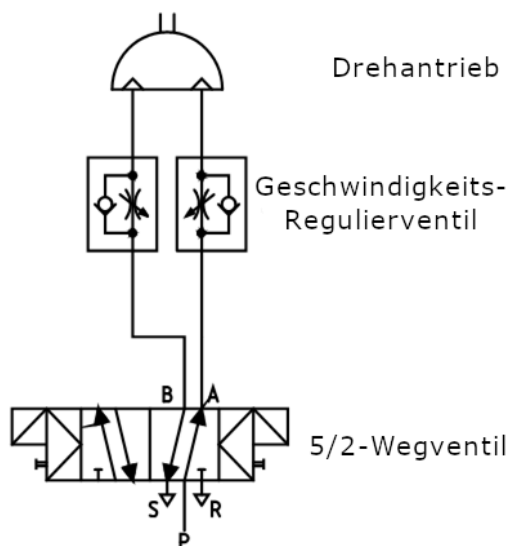



¹ Je nach Verschmutzung und Auslastung

CROSS MODULE FIXED

FUNCTION

The cross module diverts pallets from the main circuit onto a parallel running circuit. A pneumatically driven flipper diverts the pallets to the desired direction.

DRAWING

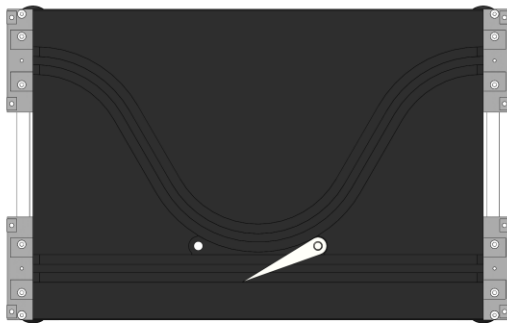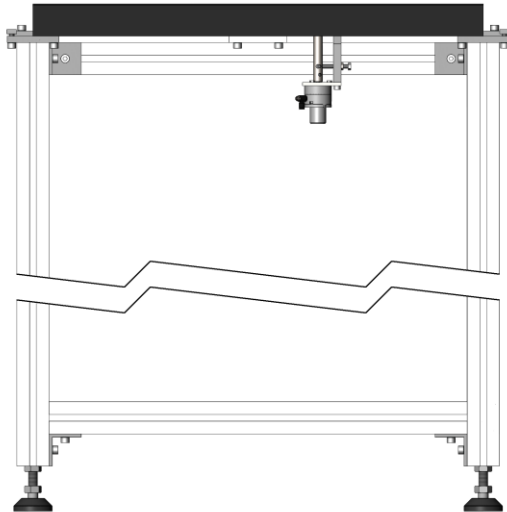

MAINTENANCE


No.	Description	Interval ²	Maintenance
1	Cross Module	M	Clean all cross modules
2	Cross Module	M	Inspection of functions and for damages

H: Hour S: Shift W: Week M: Month J: Year

WEAR PARTS / REPLACEMENT PARTS

No.	Description
1	Base Plate

PNEUMATIC CONTROL

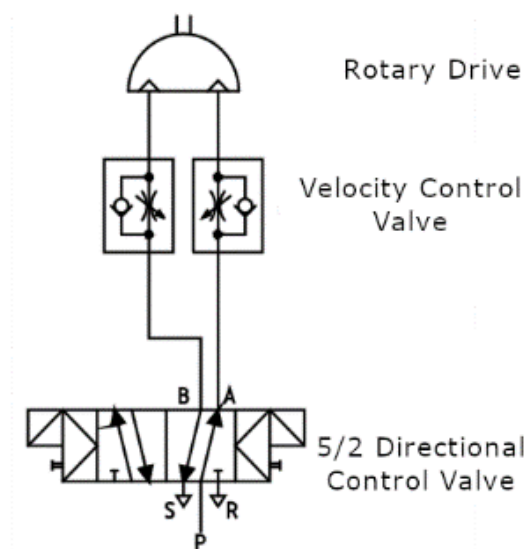

² Depending on cleanliness and usage